



RCRH02BE

RCRN02BE US 04 R271U1

Universal Remote Control Owner's Manual

Manual del Propietario (parte posterior)

SAVE THIS MANUAL AND THE CODE LISTS!

Remote controls can sometimes lose their programming when you change the batteries. Make sure you keep the manual and code lists in a safe place so that you can reprogram the remote if you need to.

Tip: This remote is already programmed to operate most Samsung TVs and Comcast cable boxes. Just press the corresponding key—TV for a television, or SAT•CBL•STREAM for a cable box. To program for other brands or devices, follow the directions in the Programming the Remote section.

Battery Installation

Your RCRH02BE universal remote requires 2 new AAA alkaline batteries (sold separately).

To install the batteries:

 
1. Turn the unit over, remove screw and remove the battery door compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.

Battery Precautions:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

Programming the Remote


To use this universal remote with your home entertainment system, first you need to program it to control your devices. Direct Code Entry lets you enter a code from the accompanying code list for your brand of device.

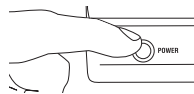

1. Manually turn on the device you want to control.



 2. Find the Code List that came with the remote. Locate the section for the type of device you're trying to program, and find your brand in that section. Circle the codes for your brand and keep them handy.

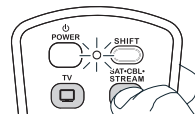

3. Press and hold the device key you want to program for about 2 seconds, until the indicator light illuminates and stays on. Then release the key.



4. Enter the first five-digit code for your brand in the code list (the indicator light flashes after each digit).

5. When you've finished entering the five-digit code, look at the indicator light.

Did the indicator light turn off?

YES: You're done! You've programmed this device key.

NO, it's still illuminated: You have either entered a code number that is not in the code lists or missed a step in the code entry procedure. Try step 4 again.

NOTES

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code in the list.

Using Arrow and OK Keys (SHIFT mode)

SHIFT




The CH and VOL keys can be used as arrow keys in the menu or guide systems of your devices. In addition, the ENTER key can be used as an OK key. This functionality is accessed with the SHIFT key.

To access SHIFT mode (CH / VOL become arrow keys and ENTER becomes OK): Press the SHIFT key. The remote's indicator light flashes. The VOL and CH keys function as left/right and up/down arrows and the ENTER key works as OK.

To return to regular key functionality: Press the SHIFT key again. The CH and VOL keys go back to being channel and volume keys and the ENTER key enters channel numbers. The remote also automatically returns to normal key functionality after 20 seconds without a keypress.

Accessing HOME screens for Streaming Players

The  key controls Samsung Hub functionality on TVs. It may also control similar functionality on other devices (see your device manual for information) **including access to HOME screens for streaming players.**

Accessing Digital Channels

The INPUT and — (dash) key lets you enter a digital sub-channel number, like 59.1, directly. Use the number keys to enter the main channel number (in this case, "59"). Then press the INPUT (-) key and press the subchannel number (in this case, "1").

Care and Maintenance

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the remote only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Keep the remote away from dust and dirt.
- Wipe the remote with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the remote's internal components can cause malfunction and invalidate its warranty.

FCC statement

Note : This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment.

Industry of Canada regulatory information

CAN ICES-3 (B)/NMB-3 (B)

Avis d'Industrie Canada

CAN ICES-3 (B)/NMB-3 (B)

Limited Lifetime Warranty

Voxx Accessories Corporation (the "Company") warrants to you the original retail purchaser of this product that should it, under normal use and conditions, be proven defective in material or workmanship during its lifetime while you own it, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-800-645-4994.

This Warranty does not cover product purchased, serviced or used outside the United States or Canada. This Warranty is not transferable and does not extend to costs incurred for installation, removal or reinstallation of the product. This Warranty does not apply if in the Company's opinion, the product has been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or the simultaneous use of different battery types (e.g. alkaline, standard or rechargeable).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO DURATION OF THIS WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights, which vary from state/province to state/province.